
Safety technique

Emergency stop module BD 5987 safemaster

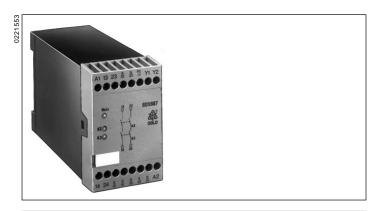




BD 5987.02:

- According to EC Directive for machines 98/37/EG
- According to EN 60204-1, DIN VDE 0113-1
- · Safety category 4 according to DIN EN 954-1
- Output: 2 NO contacts for AC 250 V
- · Gold-plated contacts to switch small loads (input for PLC)
- 1-channel or 2-channel connection
- · Line fault detection at On pushbutton
- · Operating state display
- LED displays for channels 1 and 2
- · Overvoltage and short circuit protection
- Wire connection: also 2 x 1,5 mm² stranded ferruled (isolated), DIN 46 228-4 or
 - 2 x 2,5 mm² stranded ferruled DIN 46 228-1/-2/-3
- Width 45 mm

Fucntion diagram

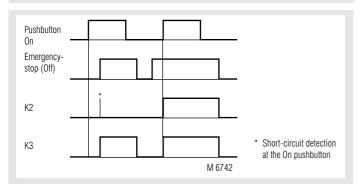

BD 5987.--/001: as BD 5987.02 but

- Optionally automatic On function when operating voltage is applied or after activation by the On pushbutton
- · Optionally cross fault detection in emergency stop circuit

Approvals and marking











* see variants

Applications

Protection of people and machines

- · Emergency stop circuits on machines
- · Monitoring of safety gates

Indication

LED power supply: on when operating voltage present

LED K2: on when supply on K2 LED K3: on when supply on K3

Notes


Line fault detection at the On pushbutton:

The output contacts cannot be closed if the On pushbutton is already closed before the voltage is applied to S12, S22 (also in the event of a line fault at the On pushbutton).


A line fault at the On pushbutton which occurs after activation of the device is recognized when switching- on takes place again and closing of the output contacts is then prevented.


If a line fault occurs at the On pushbutton after the voltage is already present at S12, S22 undesired activation will take place, because this line fault does not differ from the normal closing function.


Block diagram

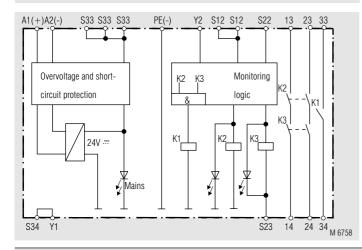

Circuit diagrams

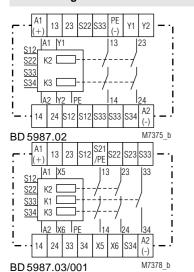

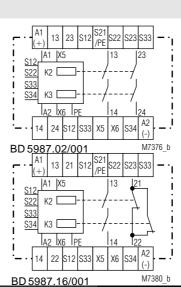

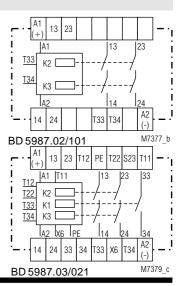

Notes

The gold-plated contacts of the BD 5987 mean that this module is also suitable for switching small loads of 1 mVA ... 7 VA, 1 mW ... 7 W in the range 0,1 ... 60 V, 1 ... 300 mA. The contacts also permit the maximum switching current. However, since the gold plating will be burnt off at this current level, the device is no longer suitable for switching small loads after this.

The PE terminal permits operation of the device in IT systems with insulation monitoring and also serves as a reference point for testing the control voltage. The internal short-circuit protection will be bridged on DC devices, if the protective ground is connected to terminal PE.

One or more extension modules BN 5989 or external contactors with positively-driven contacts may be used to multiply the number of contacts of the emergency stop module BD 5987.

For automatic restart:

S22 must be connected before S12. S12 initiates the automatic restart. With manual restart it is not necessary to follow this order.

Technical data

Input

Nominal voltage U_N: AC 24, 48, 110, 127, 230, 240 V

DC 24 V

Voltage range: AC 0,8 ... 1,1 U_N DC 0,9 ... 1,2 U_N at 10% residual ripple: at 48% residual ripple: DC 0,8 ... 1,1 U_N approx. 5,5 VA Nominal consumption: Nominal frequency: 50 / 60 Hz Control voltage at S33: DC 24 V

Control current

BD 5987.02: typ. DC 55 mA BD 5987.02/001: typ. DC 45 mA

Minimum voltage at

terminals S12, S22: DC 21 V with activated device 0,5 s after release of the emergency Recovery time:

stop pushbutton

Output

Contacts

BD 5987.02: 2 NO contacts Operate time: max. 100 ms

BD 5987.02/001: with automatic restart approx. 1 s

Release time

Opening in secondary

circuit (\$12-\$22): 50 ms \pm 25 %

Opening in supply circuit

BD 5987.02: 350 ms \pm 50 % BD 5987.02/001: 120 ms \pm 50 % Contact type: relay, positively-driven

Nominal output voltage: AC 250 V

DC: see limit curve for arc-free

operation

Thermal current I,: see continuous current limit curve (max. 10 A in one contact path)

Switching capacity

to AC 15: 5 A / AC 230 V EN 60 947-5-1

for NO contact

2 A / AC 230 V EN 60 947-5-1

for NC contact

Electrical life:

to AC 15 at 2 A, AC 230 V: 10⁵ switching cycles EN 60 947-5-1

Permissible operating

600 switching cycles / h frequency:

Short circuit strength

max. fuse rating: 6 A gL EN 60 947-5-1

Mechanical life: 10 x 10⁶ switching cycles

General data

Operating mode: Continuous operation Temperature range: - 15 ... + 55°C at max. 90 % humidity

Clearance and creepage

distances

overvoltage category /

contamination level: 4 kV / 2 IEC 60 664-1

Technical data

EMC

Electrostatic discharge: 8 kV (air) EN 61 000-4-2 EN 61 000-4-3 HF irradiation: 10 V / m EN 61 000-4-4 Fast transients: 2 kV Surge voltages

between

1 kV EN 61 000-4-5 wires for power supply: between wire and ground: 2 kV EN 61 000-4-5 Interference suppression: Limit value class B EN 55 011 Degree of protection: IP 40 EN 60 529 Housing: Terminals: IP 20 EN 60 529

Thermoplastic with V0 behaviour Housing:

according to UI subject 94

Vibration resistance: Amplitude 0.35 mm EN 60 068-2-6

frequency 10 ... 55 Hz

15 / 055 / 04 EN 60 068-1 Climate resistance:

EN 50 005 Terminal designation: Wire connection: 1 x 4 mm² solid or

1 x 2,5 mm² stranded ferruled (isolated)

2 x 1,5 mm² stranded ferruled (isolated) DIN 46 228-1/-2/-3/-4 or 2 x 2,5 mm² stranded ferruled

DIN 46 228-1/-2/-3

Wire fixing: Plus-minus terminal scews

M3.5 box terminal with wire protection

Mounting: DIN rail EN 50 022

Weight: 450 g

Dimensions

Width x height x depth: 45 x 74 x 121 mm

Standard type

BD 5987.02/001 DC 24 V

Article number: 0040954 stock item

2 NO contacts Output:

Optionally automatic On function when operating voltage is applied or after activation by the On pushbutton

Nominal voltage U_N: DC 24 V

Width 45 mm

Variants

BD 5987.02/60: with CSA approval

BD 5987.02/61: with UL approval (Canada/USA) BD 5987.02/001: Optionally cross fault monitoring on the

emergency stop loop (see application M6749)

Jumper asignment for functions:

Activation via On pushbutton / or automatic On function

On pushbutton S12-S34 or S33-S34	Jumper X5 - X6	Function
	•	The output contacts are switched only after operation of the On pushbutton. Line fault monitoring at the On pushbutton.
• •	•	Automatic On function for operating voltage Off/On or after emergency-stop release

BD 5987.03/001: with 2 NO contacts,

1 signalling contact AC/DC 0,1 ... 1 A / 10 ...120 V with 1 NO contact. 1 NC contact

BD 5987.16/001:

BD 5987.02/101: see BD 5987.02/001,

but with special terminal arrangement BD 5987.03/201:

see BD 5987.03/001,

but with special terminal designation

Variants


Jumper asignment for functions:

Activation	via On	pushbutton /	or automatic	On function

On pushbutton T11-T34 or T12-T34		Function
	• •	The output contacts are switched only after operation of the On pushbutton. Line fault monitoring at the On pushbutton.
• •	•	Automatic On function for operating voltage Off/On or after emergency-stop release

Ordering example for Variants

 
(Current via two contact rows)




Characteristics I (A) 250 200 6 Switching voltage U [V] 5 150 100 50 2 0 3 5 6 9 0 Switching current I [A] 10 20 30 40 50 M 6732 Continuous current limit curve Limit curve for arc-free M6759

operation with resistive load


Application examples

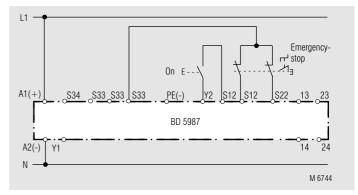

Two-channel emergeny stop circuit

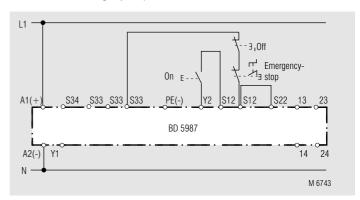

One-channel emergency stop circuit. This circuit does not have any redundancy in the emergency stop control circuit

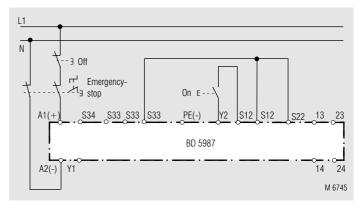


Two-pole emergency stop circuit with emergency stop control device in supply circuit.

Application for long emergency stop loops where the control voltage drops below the minimum voltage of 21 $\rm V.$

Attention:

Single faults (e.g. line faults at the emergency stop control device) are not detected with this external circuit configuration

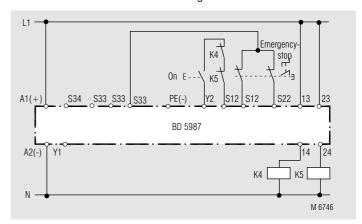


Contact reinforcement by external contactors, 2-channel.


The output contacts can be reinforced by external contactors with positively-driven contacts for switching currents > 10 A. Functioning of the external contactors is monitored by looping the NC contacts into the closing circuit (terminals Y2 - S12).

Contact reinforcement by external contactors with reduced safety level


M 6747

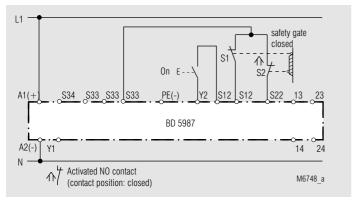

Two-channel monitoring of a safety gate

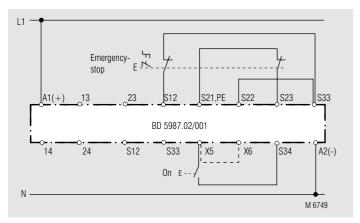

Two-channel emergency stop circuit with cross fault detection. Activation via On pushbutton. ---- Jumper X5 - X6: Jumper X5 - X6 must be fitted for the automatic On function. The On pushbutton is not required

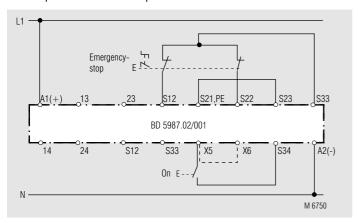

Two-channel emergency-stop circuit without cross fault detection. Activation via On pushbutton. ---- Jumper X5 - X6: Jumper X5 - X6 must be fitted for the automatic On function. The On pushbutton is not required