

Safety technique

Emergency stop module BL 5931 safemaster



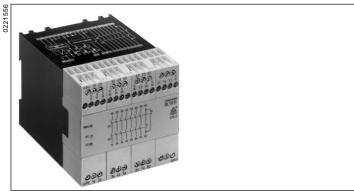


Function diagrams

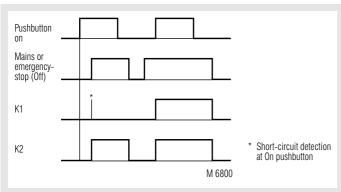

In the case of a line fault accross the On-button the relays K1 and K2 will not be energised in the model BI 5931.64/002.

BL 5931.__

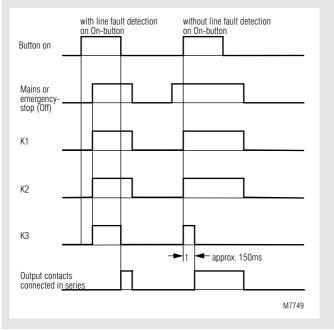

BL 5931.64/003

- According to EU directive for machines 98/37/EG
- According to EN 60204-1, DIN VDE 0113-1
- Safety category 4 for E-stop circuit according to DIN EN 954-1
- Output: max. 7 NO, 1 NC contacts for AC 250 V
- 1- or 2-channel connection
- Line fault detection at the On pushbutton
- Optionally automatic on feature when operating voltage applied or activation via the On pushbutton
- Optionally cross fault detection in the emergency stop circuit
- Feedback circuit Y₁-Y₂ for monitoring external contactors
- Integrated short circuit and overvoltage protection
- LED indicators
- Optionally with phase failure bridging BI 5931.64/003
- Removable terminal blocks
- Width 90 mm

Approvals and marking



* see variants

Applications


Protection of persons and machines

- Emergency stop circuits of machines
- Monitoring safety gates


Indication

LED power supply: on when operating voltage present
LED K1: on when current flows throught relay K1
LED K2: on when current flows throught relay K2
In addition to BL 5931.64/003


LED Input 1: on when current flows throught channel 1
LED Input 2: on when current flows throught channel 2
LED K3: on when current flows throught relay K3

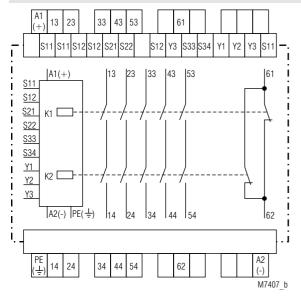


BL 5931.60

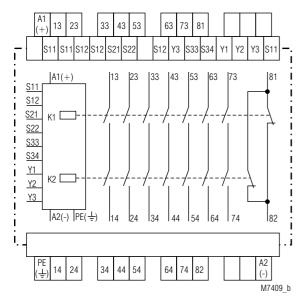


BL5931.63

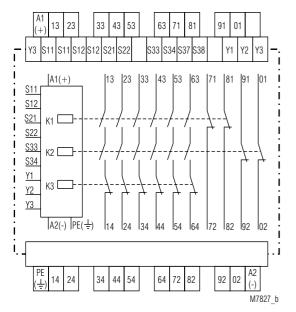

BL 5931.64/003

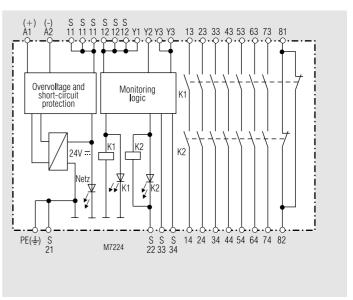

BL 5931.63

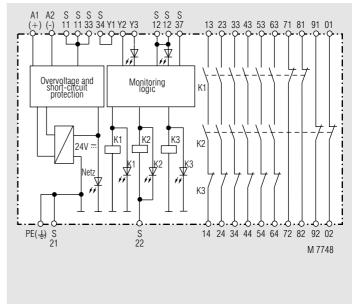

BL 5931.64/003

Notes

Line fault detection at the ON pushbutton:

If the ON pushbutton was already closed before the voltage was applied at S12, Y3 (also in the case of line fault via the ON pushbutton), the output contact cannot be switched on.

A line fault at the ON pushbutton which occured after activation of the unit is recognized when switching-on takes place again and switching-on of the output contacts is prevented. If a line fault occures at the ON pushbutton after the voltage has already been applied at S12 and Y3, unwanted activation occures because this line fault can not be distinguished from the regular switching-on function.

BL 5931.60 and BL 5931.63:

On these models the line fault detection across the ON-button is activated by switch S1. The switch is located under the removable front plate. The default setting of S1 is "AUS" (Off).

The setting of switch S1 and the corresponding start function is described in the table below. See also picture 1 to 7.

The line fault detection on the ON-button is only active if both channels of a 2 channel e-stop loop are operated at the same time and a min ONtime of 5 sec is provided.

BL 5931.64/003:

On these models the line fault detection across the ON-button is activated by linking terminals S37-Y2. The default setting is with link on S37-Y2. The setting of link S37-Y2 and the corresponding start function is described in the table below. See also picture 7 to 9.

The goldplated monitoring contacts 71/72, 81/82, 91/92 and 01/02 are suitable to switch low loads of 0.1 ... 60 V and 1 ... 300 mA. The contacts also allow to switch the max. current. As the goldplating then is damaged, low loads cannot be switched anymore.

	1)	2)	
	BL 5931.60 BL 5931.63	BL5931.64/003	3
Terminals 1) S33-S34 2) S12-S34	Switch S1	Terminals S37-Y2	Function
	On	0 0	- after pressing the On button the outputs are switched - recovery time 1 s - no line short-circuit de- tection at the on switch
·	On	0 0	- automatic On function when operating voltage On / Off or when emergency stop re- leased - recovery time 1 s
	Off	o	after pressing the On button the outputs are switched line short-circuit de- tection at the on switch
00	Off	·	This configuration is not permitted. The output contacts do not switch.

General:

The connection terminal PE is used for operating the unit even in IT systems with insulation monitoring, and also as a reference point for testing the control voltage. With DC units, connecting the protective conductor to connection terminal PE jumpers out internal short-circuit protection.

The terminal blocks are provided with markings as identification aids for placing. Not for BL 5931.64/003.

Technical data

Nominal voltage U,: DC 24 V AC 230 V AC 0,85 ... 1,1 U_N Voltage range: at 10 % residual ripple: DC 0,90 ... 1,2 U_N at 48 % residual ripple: DC 0,85 ... 1,1 U_N Nominal frequency: 50 / 60 Hz

Phase failure bridging

BL 5931.64/003: approx. 150 ms

Control voltage

typ. DC 24 V at S11:

at S21: 0 V

Minimum voltage at terminals S12, Y3:

DC 21 V when unit activated

Recovery time:

Output

Contacts

BI 5931.60: 5 NO, 1 NC contacts (on request)

BL 5931.63: 7 NO, 1 NC contacts

BL5931.64: 6 NO, 4 NC contacts not redundant (redundancy can be achieved by external

wiring).

Contact type: Relay, positively driven

Output voltage: AC: 250 V

DC: see limit curve for arc-free operation see Continuous current limit curve

(max. 5 A in one contact path)

Switching capacity

Thermal current I_{th}:

to AC 15

NO contact: 5 A / AC 230 V EN 60 947-5-1 NC contact: 2 A / AC 230 V EN 60 947-5-1 Electrical life DIN VDE 0660 p. 200, EN 60 947-5-1

10⁵ switching cycles

600 switching cycles / h

at max. 90 % air humidity

to AC 15 at 2 A, AC 230 V: Permissible switching

frequency:

Short circuit strength

max. fuse rating:

EN 60 947-5-1

max. line circuit breaker:

Mechanical life:

6 A gL

C 10 A

30 x 106 switching cycles

General data

Operating mode: Continuous operation Temperature range: - 15 ... + 55°C

Clearance and creepage

distances

overvoltage category /

contamination level:

4 kV / 2

2 kV

1 kV

2 kV

8 kV (air)

IEC 60 664-1

EMC

Electrostatic discharge: Fast transients:

Surge voltages

between

Housing:

wires for power supply: between wire and ground: Interference suppression:

Degree of protection:

Housing: Terminals:

IP 40 IP 20

Limit value class B

EN 60 529 EN 60 529 Thermoplastic with V0 behaviour according to UL subject 94

Vibration resistance: Amplitude 0,35 mm

frequency 10 ... 55 Hz

15 / 055 / 04

Climate resistance: Terminal designation:

EN 50 005

EN 60 068-1

FN 60 068-2-6

EN 61 000-4-2

EN 61 000-4-4

EN 61 000-4-5

EN 61 000-4-5

EN 55 011

Technical data

Wire connection: 1 x 4 mm² solid or

1 x 2,5 mm² stranded ferruled (isolated)

2 x 1,5 mm² stranded ferruled (isolated)

EN 50 022

stock item

DIN 46 228-1/-2/-3/-4 or 2 x 2,5 mm² stranded ferruled

DIN 46 228-1/-2/-3

Wire fixing:

Plus-minus terminal screws M3.5 box terminals with wire protection

DIN rail Mounting:

Weight

760 g DC-version: AC-version: 890 g

Dimensions

Width x height x depth: 90 x 84 x 118 mm

Standard type

BL 5931.63 DC 24 V

Article number:

0046160 Output: 7 NO, 1 NC contacts

 Nominal voltage U_N: DC 24 V 90 mm

Width:

Variants

BL 5931. /61: BL 5931.64/003: with UL approval (Canada/USA) with line fault detection on On-button via

bridge S37-Y2, 6 NO contacts, 4 NC contacts not redundant.

Redundancy can be achieved by external wiring.

- phase failure brigding

to be used as gate monitor (according to picture 6 and 9)

- 6 LEDs


- Switching capacity according to

AC 15, 5 A / 230 V


- Contact fusing 10 A rapid / 6 A slow


- 4 monitoring contacts, suitable to switch low loads

Ordering example for Variants

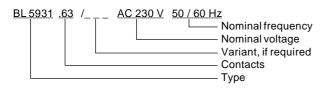

Characteristics

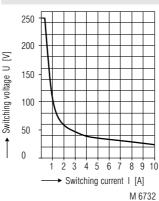


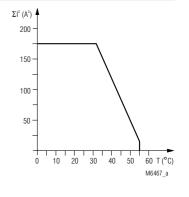

Limit curve for arc-free operation under ohmic load


Continuous current limit curve Total of currents² per safety contact = value on scale $\Sigma I^2 (A^2)$

Application example

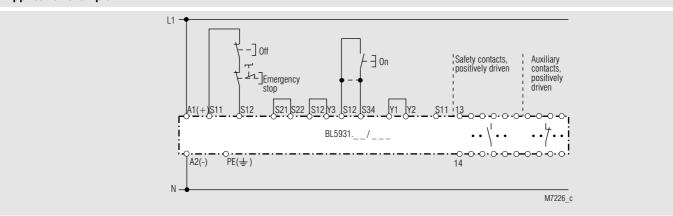


Picture 1: Single-channel emergency stop circuit, activated with On-button. For automatic restart at the BL 5931.64/003 terminals S12-S34 and at the BL 5931.60 and BL 5931.63 terminals S33-S34 have to be linked, the push button is left away.


Application examples

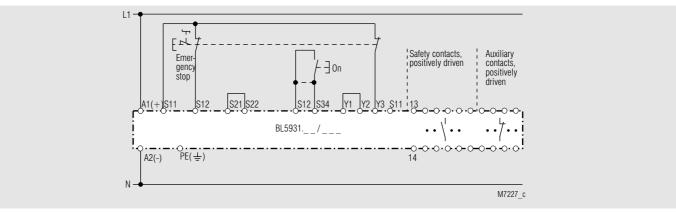

Picture 2: Two-channel emergency stop circuit without cross fault detection, activated with On-button. For automatic restart at the BL 5931.64/003 terminals S12-S34 and at the BL 5931.60 and BL 5931.63 terminals S33-S34 have to be linked, the push button is left away.

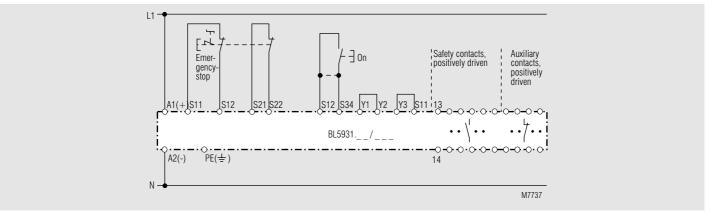


Picture 3: Two-channel emergency stop circuit with cross fault detection. For automatic restart at the BL5931.64/003 terminals S12-S34 and at the BL 5931.60 and BL 5931.63 terminals S33-S34 have to be linked. No On-button.

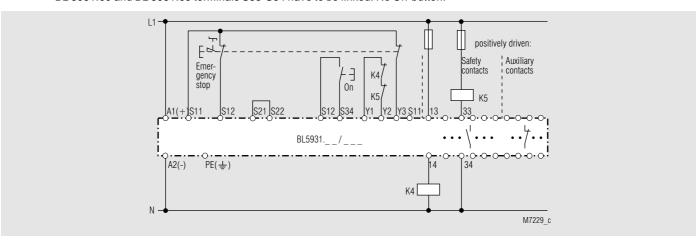

Picture 4: Contact reinforcement with external contactors, 2-channel connection, without cross fault detection.

For current > 5 A the output contacts can be reinforced by external contactors with positive guided contacts.


The function of the contactors is monitored by connecting the NC-contacts to the feed-back circuit (terminals Y1-Y2).

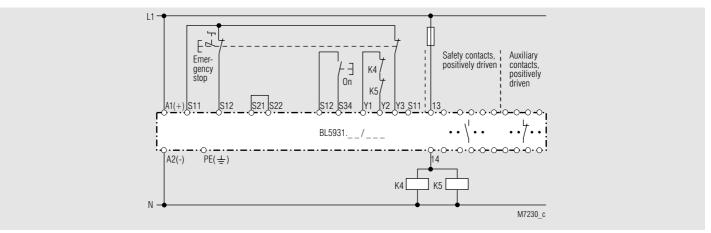

Picture 5: Contact reinforcement with external contactors with reduced redundancy.


BL 5931._ _ /_ _ for all variants

Application examples

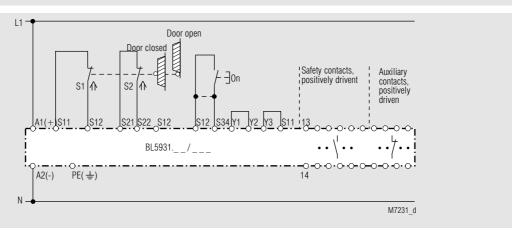


Picture 6: Two-channel monitoring of a safety gate. With manual restart S1 and S2 can be switched without observing a certain sequence.


Activated with On-button. For automatic restart at the BL 5931.64/003 the terminals S12-S34 and at the BL 5931.60 and BL 5931.63 terminals S33-S34 have to be linked, the push button is left away.

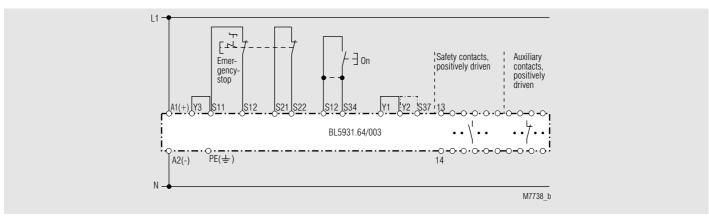

Picture 7: Two-channel emergency stop circuit with cross fault detection and automatic restart

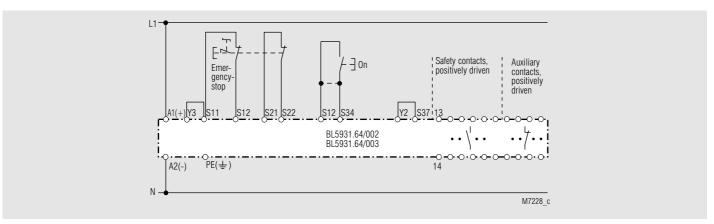

Picture 8: Two-channel emergency stop circuit with cross fault detection, activated with On-button without line fault detection on On-button. With link on S37-Y2 line fault detection is activated.

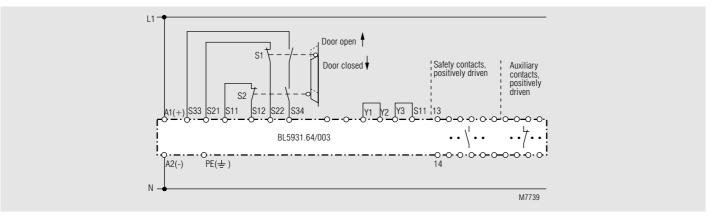

Picture 9: Monitoring of a safety gate by limit switches with 1 NO and 1NC contact and automatic restart

BL 5931.__/__ for all variants